

PK cannot put down the material on the cutting table after loading material.


Fault description:

- 1. There is always suction in the cups under the gantry.**
- 2. Pick up a couple of sheets one time and can not put down.**

SOLUTIONS:



- 1. Drill some holes on the cup.**
- 2. Adjust throttle valve.**

Cut holes on the cup to reduce the suction.

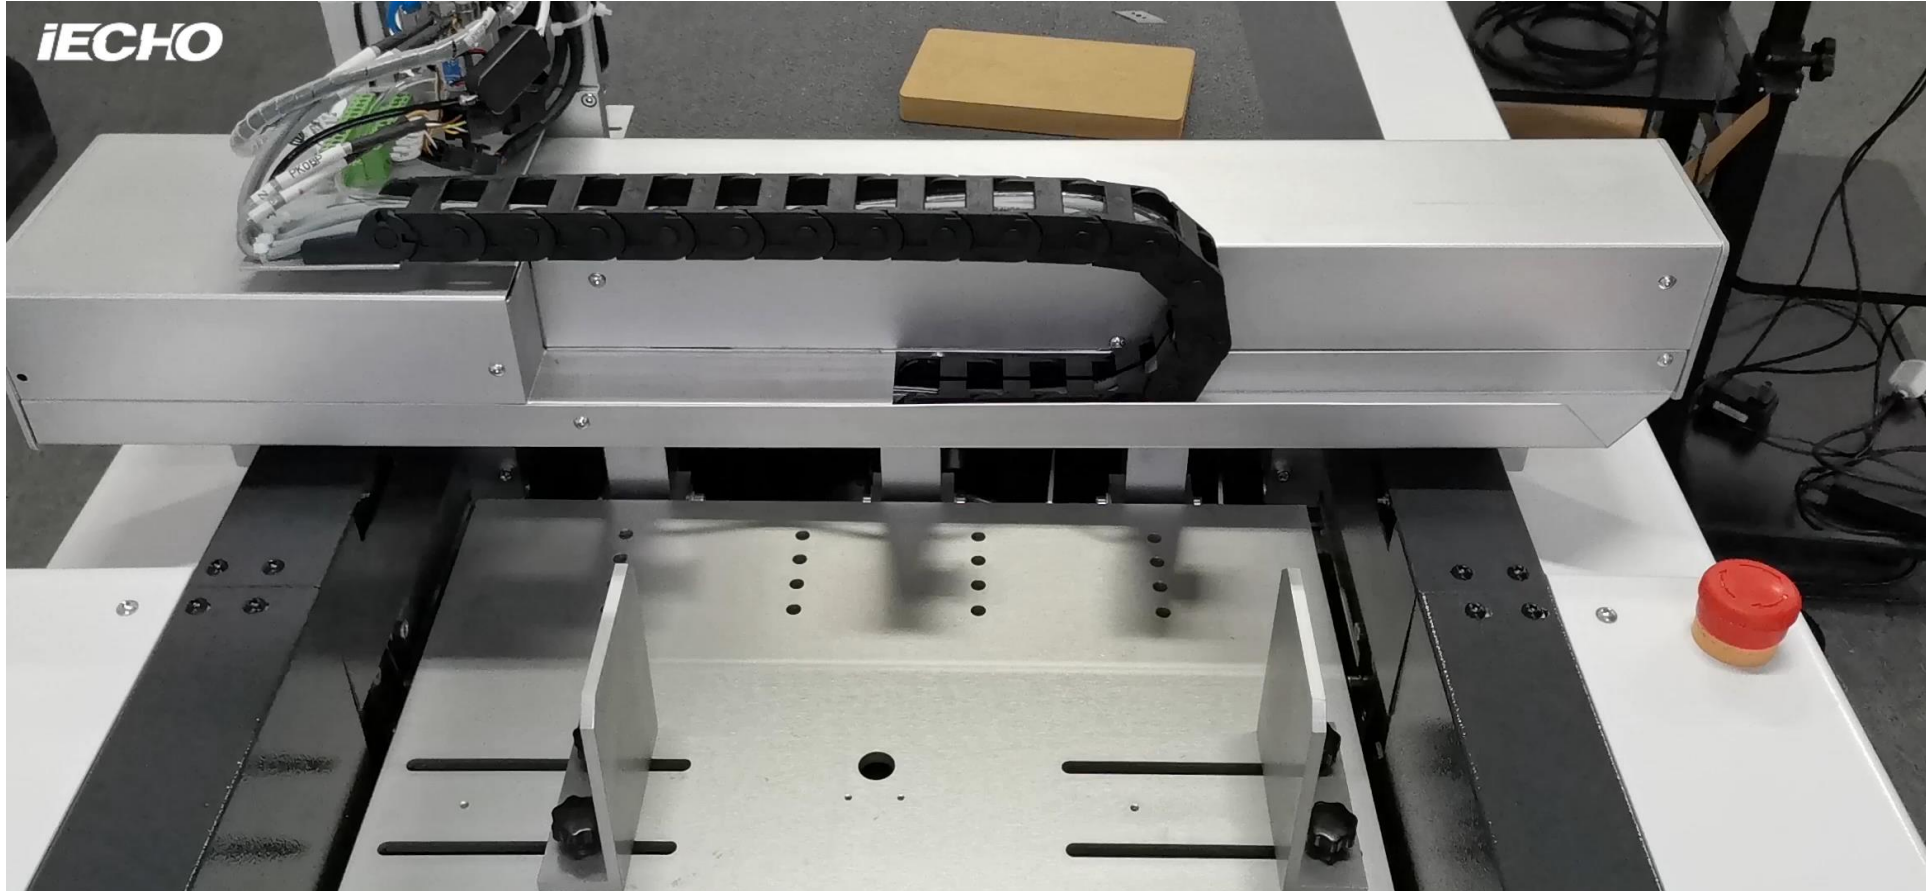

Check the video here of how to cut holes on the cup.

Adjust throttle valve to reduce the suction.

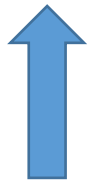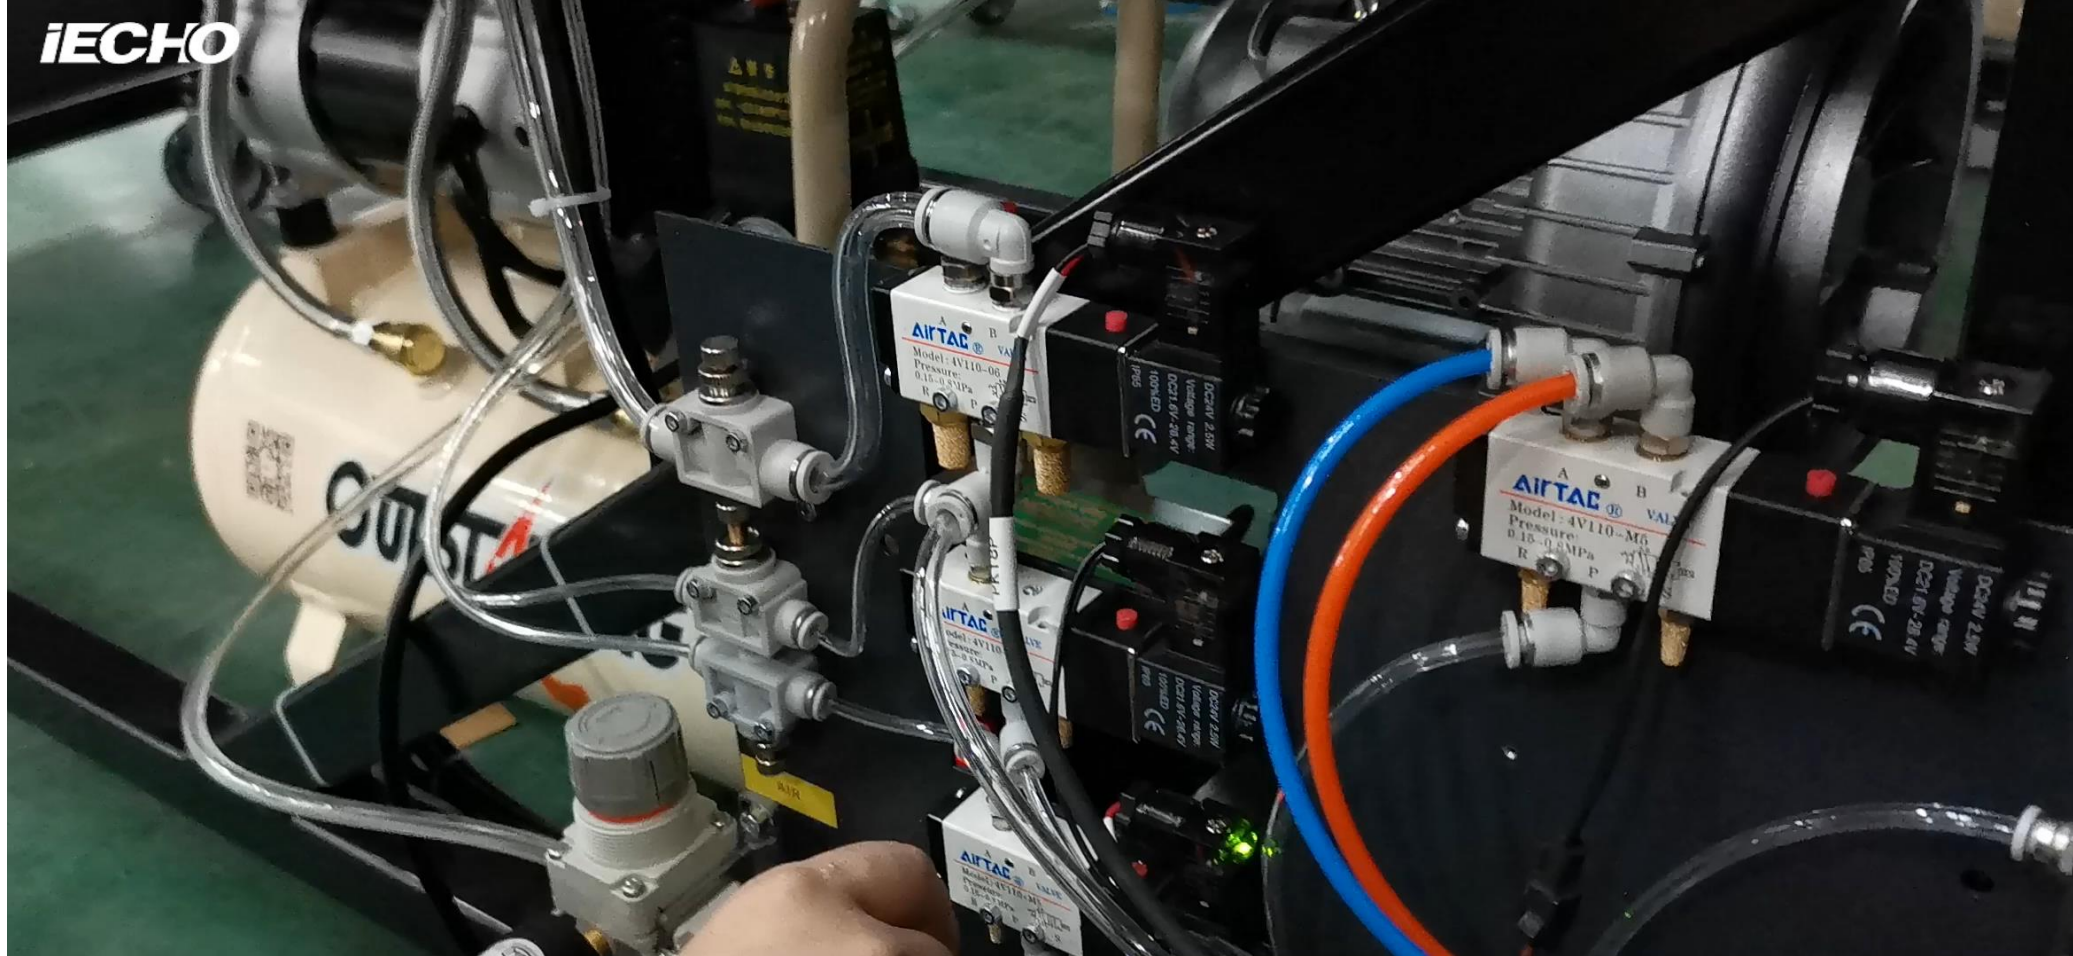

Check the video here of how to cut holes on the cup.